

DO NOT CONNECT THE FITTING LIVE

Electrical products can cause death, injury, or damage to property. Installation of this product must be carried out by a qualified electrician, in compliance with SANS 10142 or corresponding regulations of the country of installation. On completion of installation, the Certificate of Compliance must be updated.

WARNING: TO AVOID FIRE, SHOCK OR DEATH

TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND TEST THAT THE POWER IS OFF BEFORE WIRING

ALL LUMINAIRES SUPPLIED AND TO BE INSTALLED ABOVE AND BELOW 5 METERS ARE IN COMPLIANCE WITH IEC 60598 SECTION 3.5.6 ACCORDING TO THE MANUFACTURER GUARANTEE AND WARRANTY

Regent Lighting reserves the right to change specifications modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.



WARNING

Electronic Control Device

ELECTRIC SHOCK HAZARD

This equipment is to be serviced by trained personnel only.

The light source contained in this luminaire shall only be replaced by the manufacturer or his/her service agent or a similar qualified person.

The above testing allows access to the Driver and LED compartments, however these test should only be carried out by trained professional, incorrect handling of the delicate components could cause further damage to the luminaire.

If the luminaire is opened for testing, all components must be re-assembled as before, as incorrect re-assembly will impact the IP rating of the luminaire.

www.regentlight.co.za

REGENT LIGHTING A DIVISION
OF WAHL INDUSTRIES.

3 - 13 MAIN REEF SERVICE ROAD, CORNER
SPRINGBOK AND MAIN REEF ROAD, INDUSTRIAL,
JOHANNESBURG, SOUTH AFRICA.
TEL : +27 11 474 0171

April 2020

INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE STARTING INSTALLATION.
ALL CONNECTIONS TO BE CARRIED OUT BY A QUALIFIED ELECTRICIAN



WARNING

 
Electronic Control Device

ELECTRIC SHOCK HAZARD

This equipment is to be serviced by trained personnel only.

DO NOT CONNECT THE FITTING LIVE

1

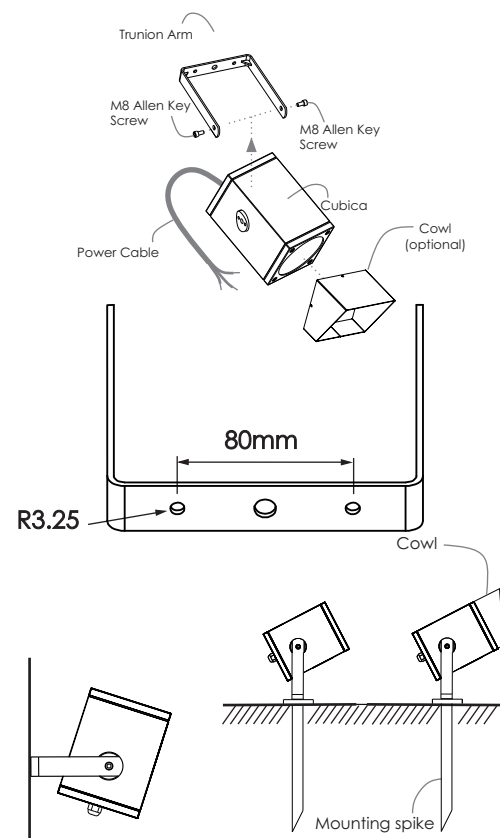

- Be sure the electricity to the system you are working on is isolated.
- If the main supply power (live) is on, it will cause damage to the luminaire.

- Electrical: 220 ~ 240V AC 50 Hz
- Overall weight: 3kg
- Ambient temperature: $T_a \leq 36^\circ\text{C}$
- IP rating according to IEC 60598-1: IP65
- Mounting: Wall, Floor or Spike Mounted

1. Select required position for the luminaire in the normal operating position as indicated.



 
Important Safety Instructions

- This product should be installed by a competent person i.e. Qualified electrician.
- This product requires a constant stable electrical supply 220V - 240V VAC 50Hz - alternating current.
- The product must be regularly maintained, including the replacement of lamps/LED timeously.
- This product could be HAZARDOUS if not used correctly, it could cause electric shock, serious bodily harm or death.
- This product is not a toy, please keep away from children.
- This product may contain small parts that can be swallowed.



- Use only the correct light bulbs/LED as stipulated on the carton for the product.
- Any modifications of this product after supply will result in the guarantee being void.
- Spare parts may become unavailable over time. Items can vary slightly from the picture on the carton
- Coastal humidity can affect the longevity of the light fitting over time.
- Be sure to follow the steps in the order given.
- Read instructions carefully.

2 MOUNTING

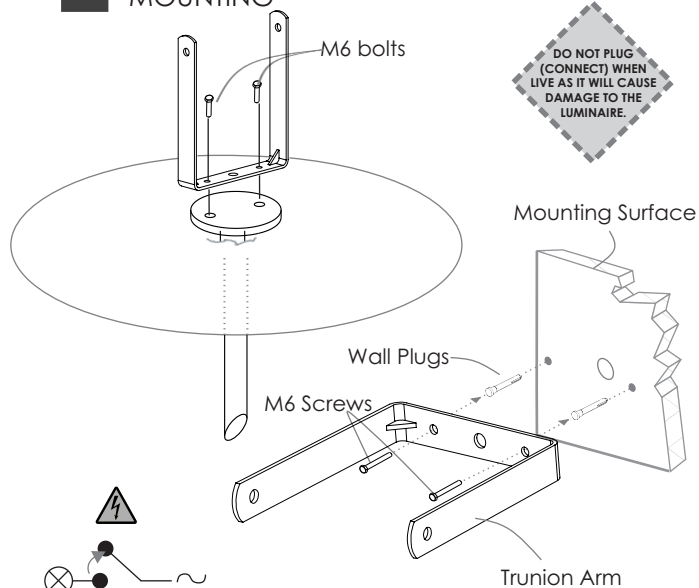

2. Select the required position for the luminaire and mark the mounting points on the selected surface. Ensure that the Trunion Arm is level before drilling the mounting holes.

 
After the mounting holes are drilled place the wall plugs inside the mounting holes

Mount the trunion arm to the selected surface by fastening the M6 Stainless Steel screws into the wall plugs already inserted into the wall.

- OR -

Bolt the trunion arm to the mounting spike that can be inserted into the ground

3 WIRING CONNECTION

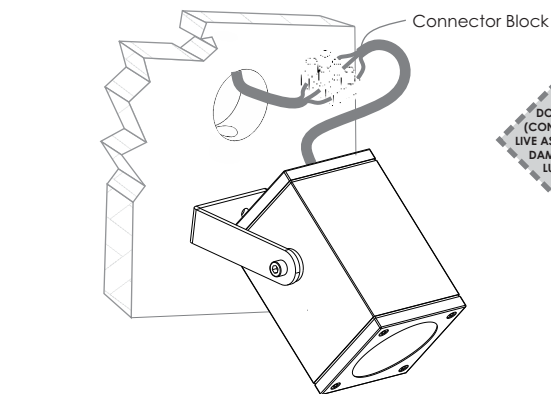


3. Connect the power supply to the to the connector block.

Switched Live (S/L), Neutral (N) and Earth (E) cable(s) to the connector block in the wall box of the fitting.


SWITCHED LIVE – (Red or Brown) to terminal marked L
NEUTRAL – (Black or Blue) to terminal marked N
EARTH – (Green/Yellow) to terminal marked E.

And test the fitting before mounting it.

 220 ~ 240V AC 50 Hz

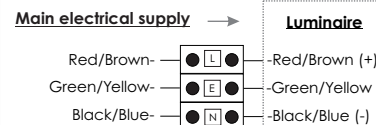

4 ADJUSTMENT

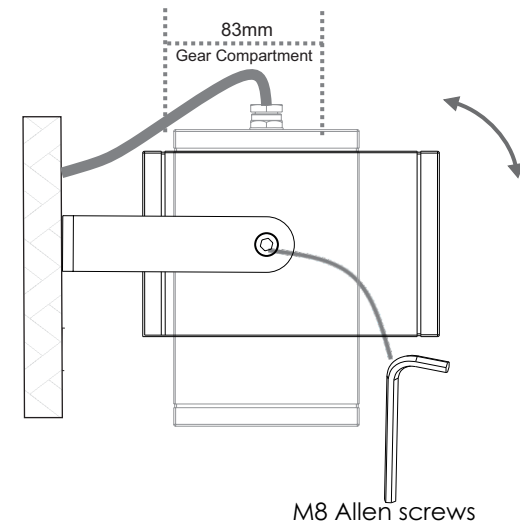 


5. Loosen the M8 allen key screws to adjust the angle of the fitting.

Once the fitting is at the correct angle fasten the M8 allen key screw to keep the fitting from moving out of position.

5

 6. Switch on power supply.

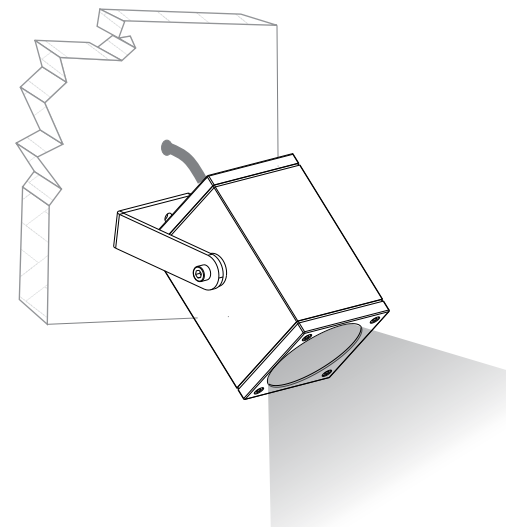

Replaceable electrical components by end user